


Variations

2 different clamp sizes are available.

- **iH-200-S** : Fits 22 – 29mm diameter
- **iH-200-M** : Fits 28 – 35mm diameter

Functions

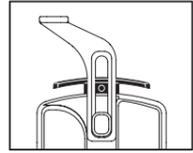


Holds the phone securely from all 4 directions. The arms are fully adjustable.

The side wings open wide to accommodate devices up to 75mm wide, with or without a case.


Side wings can be locked to prevent unexpected opening from shock or vibrations during ride.

Make sure you securely lock the wing before start riding.

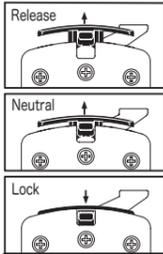


New quick release system eliminates worry of theft when parked. The body is detachable.

Back Side

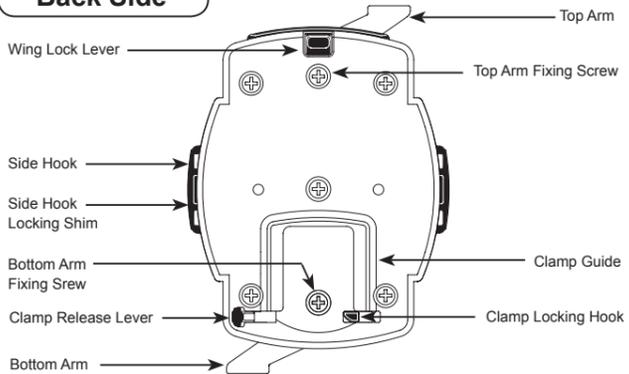


Contents

Check to make sure you have all the parts. Contact place of purchase if you are missing pieces.

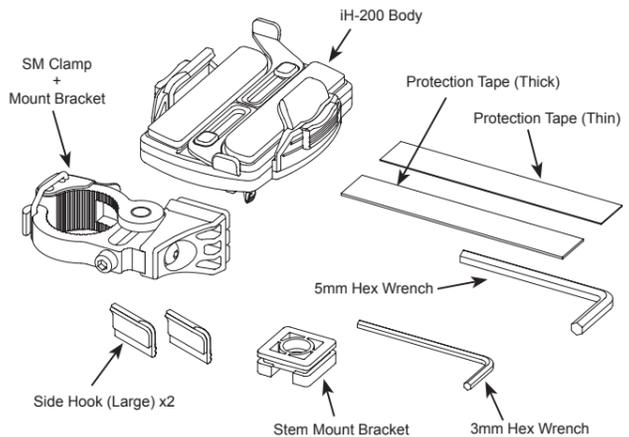

Installation

Fasten the body to the mount bracket on the clamp.

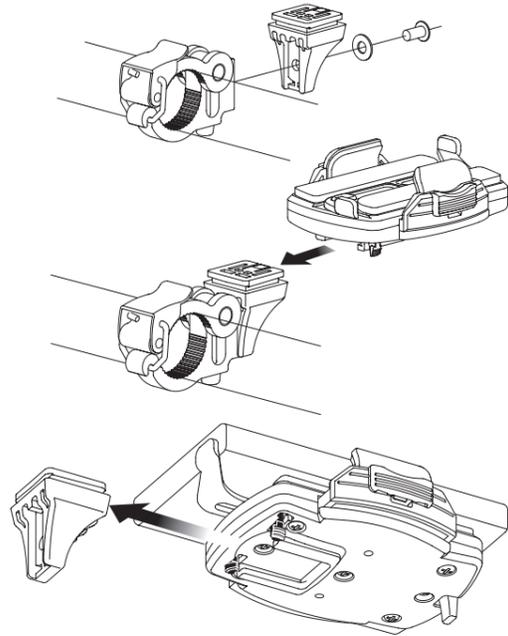


Directions

Can be adjusted in 90 degree increments by changing the insertion direction.


On The Stem

Included plastic block is the bracket for mounting on the stem. Tighten the screw with 3mm hex wrench. You don't use the flat washer.

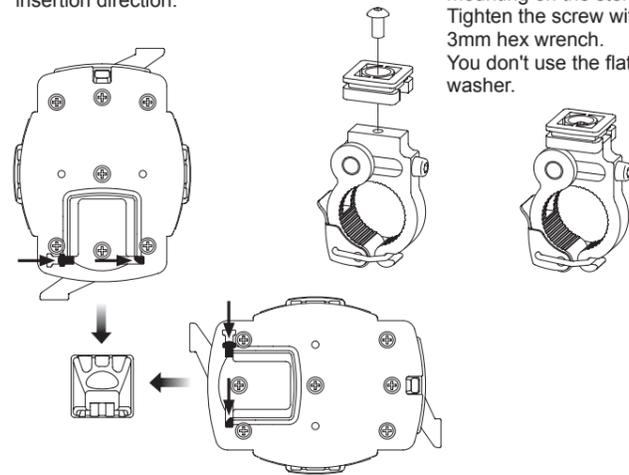

Open Wings

To open the wings, pull the red Wing Lock Lever. After clamping the phone, push down this lever to lock the wings securely.

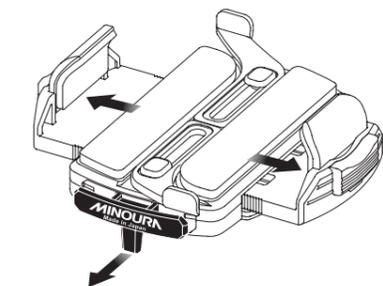


Re-pushing the wings after clamping the phone could release the lock automatically. Make sure the red lock lever is fully engaged before riding.

Adjust Hook


iH-200 comes with 2 sets of Side Hooks (Large & Small). Each hook can be set at 2 levels to fit various thickness of the phone. Choose the best hook size and position to your actual phone size.

 6 – 9mm Thick




Small Hook / Low

 12 – 15mm Thick



Large Hook / Low

 
9 – 12mm Thick




Small Hook / High

[Default Combination]

 
15 – 18mm Thick




Large Hook / High

 

Side Hook (Small)


 


Side Hook (Large)

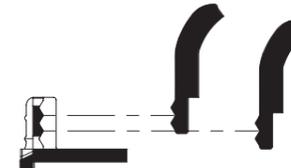


2 height levels available

Replace Hook

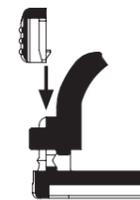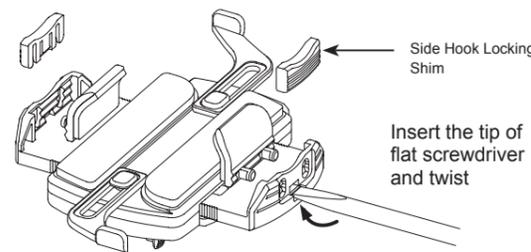


While pushing the hook fully toward the wing end, slide down the shim to the pins to fix. Make sure you fully push down the shim.

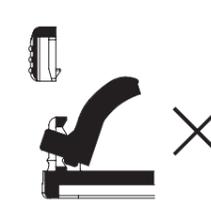

If the hook has been slanted, the shim cannot be installed.

Adjust Arms


Adjust the arm position to fit the actual phone size.

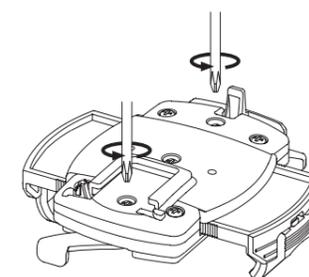


The center chrome plated screw holds the arm. Loosen it to adjust the arm position.




Do not loosen any other screws.

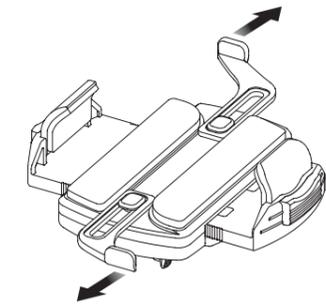

Extend both top and bottom arms.

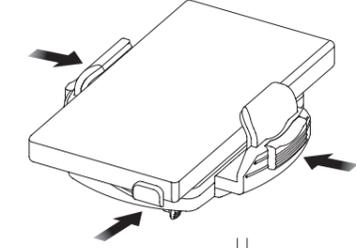

Place the phone and shut the wings to hold the phone temporarily.

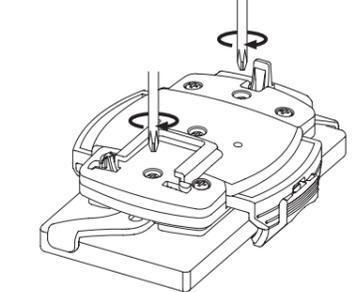


Slide both arms until they touch the phone case. Tighten the screw to fix the position.


We recommend you to set the phone as close to you as possible for better balance.

Clamp Mechanism


iH-200 comes with the quick release type clamp. It doesn't require any tool.

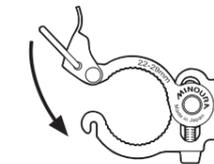


Wrap the protection tape around the handlebar. Put the clamp on it and shut the arm. Hook the metal ring.

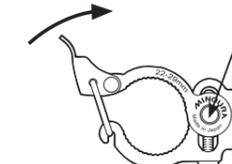

Adjust the side screw to be as you feel some resistance when the lever comes to the mid point on its stroke.

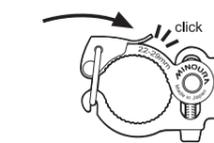

If you hear clicking sound when completely closing the lever, it's the sign of correct installation. If you don't hear any sound, the clamp is still loose. Release the lever and tighten the adjusting screw a little more.

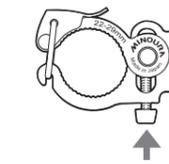

Make sure the adjusting screw is fully retracted into the clamp body. Failure to do so will cause the unexpected dropping off problem.

Do not try to tighten the adjusting screw after closing the clamp instead of adjusting the screw properly.